


# MEGABLOK


## ROLLER SHUTTER DOOR CABINET

1	BASE
2	LEFT LATERAL
3	RIGHT LATERAL
4	TOP
5	LEFT BACK PANEL
6	RIGHT BACK PANEL
7	DOORS
8	INTERNAL LATERALS

**FIRST STEP:**  
ASSEMBLE THE CABINET LYING WITH THE FRONT PART ON FLOOR SIDE OVER SOME CARTONS.

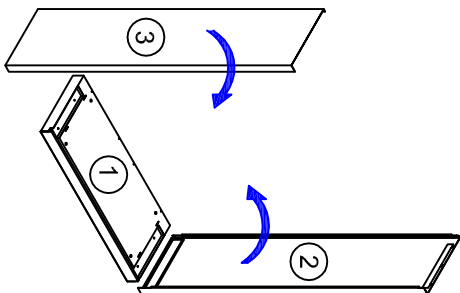


**SECOND STEP:**  
JOIN THE TOP (4).

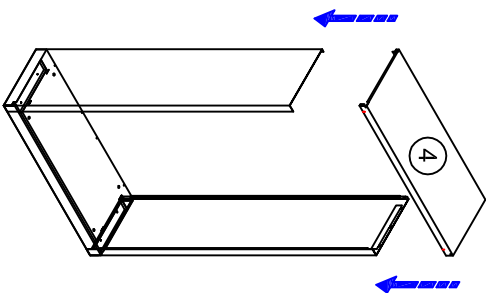


**TO BE ASSEMBLED BY TWO PEOPLE**


**THIRD STEP:**  
JOIN THE LEFT (5) AND THE RIGHT BACK PANEL (6) WITH THE FRAME. PUT IT IN VERTICAL POSITION AND FASTEN THE SCREWS.

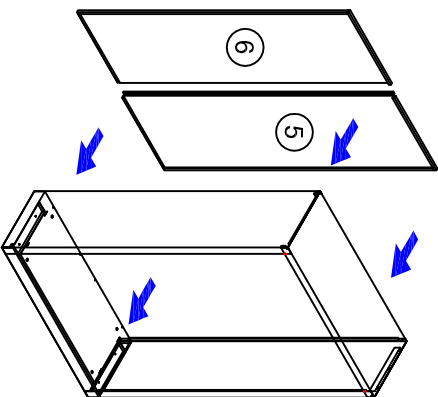

**FOURTH STEP:**  
PLACE THE DOORS (7), PUTTING ONE OF IT FIRST INTO THE LOWER GUIDE RAIL OF ONE SIDE OF THE CABINET AND BEND IT CAREFULLY TO THE OPPOSITE SIDE, UNTIL IT GOES INTO THE UPPER GUIDE RAIL. ONCE IT HAS BEEN INTRODUCED, MOVE IT TO THE CORRESPONDING SIDE AND DO THE SAME PROCEDURE WITH THE OTHER DOOR.

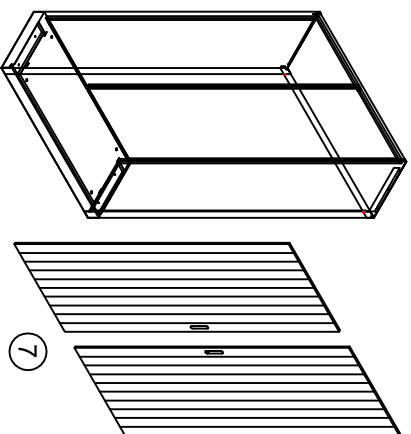

**FIFTH STEP:**  
ROLL THE DOORS INTO THE LATERALS OF THE CABINET (8) AND PLACE THE INTERNAL LATERALS JOINING FIRST THE LOWER EDGE-RAISED PARTS OF THE INTERNAL LATERALS AND FASTENING AFTERWARD THE TWO UPPER SCREWS.

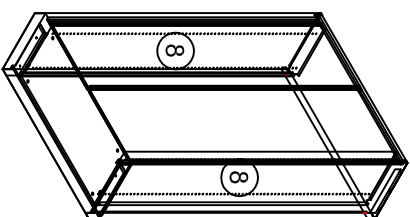

**SIXTH STEP:** FIX THE CENTRAL STOPS (A) AT THE CENTRAL UPPER AND LOWER PART OF THE GUIDE RAIL WITH SCREWS.

